



USER MANUAL



47° North

Ref. CI101

Cimier 47° North

Display and controls



- 1. Hours hand
- 2. Minutes hand
- 3. Seconds hand

- 4. Date

- 5. Crown

1. Functions

- **Time:** Hours, minutes, seconds.
- **Date:** 31 days.

2. Operating the crown

Unscrewing the crown

1. Rotate the crown counter clockwise until it “pops” out from the case into Position I.

Screwing the crown

1. Push the crown towards the case.
2. Slightly rotate the crown counter clockwise to seat the thread until you feel a “click”. This ensures the threads are properly aligned.
3. Rotate clockwise until the crown is tight.

3. Setting Up Your Watch

Winding the Watch

If the watch has stopped or hasn't been worn:

1. Unscrew the crown to Position I.
2. Rotate the crown clockwise 20-30 times and screw the crown back in.

Setting the Time

1. Unscrew the crown and pull it out to Position III (the furthest notch).
2. Rotate the crown to set the desired time.
3. Push the crown back to Position I and screw it down securely.

Quick-set date adjustment

1. Unscrew the crown and pull it to Position II.
2. Rotate the crown clockwise until the correct date appears.
3. Push the crown back and screw it in.

Note: Do not adjust the date when the watch time is between 8:00 PM and 4:00 AM.

Synchronizing AM/PM

To ensure your date changes at midnight (and not noon):

1. Pull the crown to Position III and rotate the time forward.
2. If the date changes as the hands pass 12, the watch is now in the AM cycle.
3. Set the time accordingly, then return to Position II to set the final date.
